


INSTRUCTIONS FOR OPERATION AND CARE

of the

Remington

MODEL 11 AUTOLOADING SHOTGUN

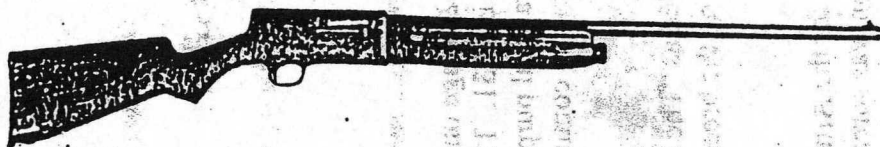

*Absolute,
No Parts*



INSTRUCTIONS FOR OPERATION AND CARE

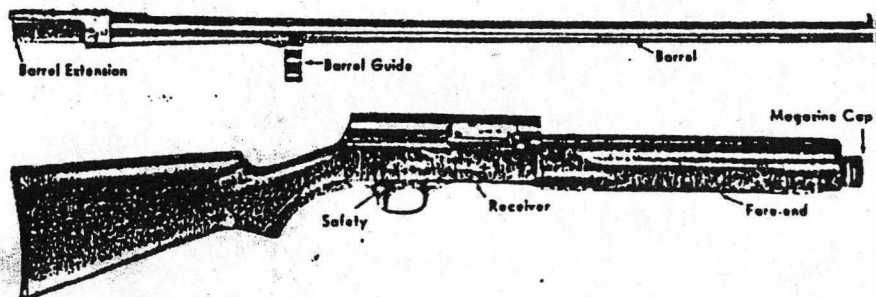


FIGURE 1

This model is shipped from the factory taken down as shown in Fig. 1.

Put Gun Together: Hold fore-end rearward to retain recoil spring within fore-end, and unscrew the knurled magazine cap at forward end.

Remove fore-end from magazine tube.

Fit barrel extension into receiver and barrel guide over magazine tube; push barrel into receiver until barrel extension is entirely within receiver; hold barrel in this position against recoil spring pressure. Put fore-end on magazine tube and tighten magazine cap to hold fore-end tightly against receiver.

CAUTION—Do not press carrier latch button allowing breech block to spring forward when barrel is dismounted from gun.

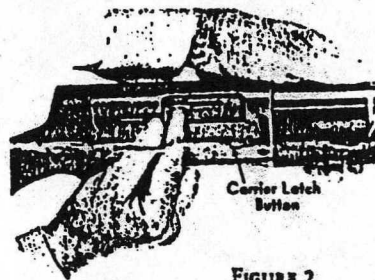


FIGURE 2

Set Safety On: Push safety from left to right; this is located at rear of trigger. When red band on left end disappears, the safety is set fully ON, and gun is safe to carry loaded.

Load Barrel: Pull operating slide back until it locks in position. Fig. 2.

Put a loaded shell into ejection opening, Fig. 3; allow it to settle upon carrier. Keep fingers away from ejection opening while pressing carrier latch button; breech block will spring forward, move shell into

