

Charles Daly®

INSTRUCTION
MANUAL
FOR
SEMI-AUTO
SHOTGUNS

READ THE INSTRUCTIONS AND
WARNINGS IN THIS MANUAL CAREFULLY
BEFORE USING THIS FIREARM

FIREARMS SAFETY

At Charles Daly, we believe that safe firearms handling is the most important consideration of anyone who uses firearms and ammunition. Please take a few minutes to thoroughly read and understand this instruction manual, the SAAMI "Firearms Safety Depends on You" pamphlet and the NSSF publication "Firearms Responsibility in the Home", all included with this shotgun.



You should completely understand this manual before you practice loading, unloading and firing with live ammunition.

Remember, firearms safety does depend on you!

CAUTION

Take note of the following warnings on gun handling before attempting to use your shotgun:

- Don't rely on your gun's safety. Treat every gun as if it were loaded and ready to fire.
- Never cross a fence, climb a tree or jump a ditch with a loaded gun.
- Never load or carry a loaded gun until you are ready to use it.
- Watch your muzzle so the other fellow doesn't have to.
- Keep guns and ammunition separately and in locked storage.
- Don't shoot unless absolutely sure of your target and what is beyond it.
- Know the range of your gun.
- Always wear eye and protection when shooting.
- Always be sure the barrel is clear of obstructions, and only carry ammunition specifically intended for the gun you are using.
- Do not alter or modify your gun. Have gun checked regularly by a competent gunsmith.

UNPACKING YOUR SHOTGUN



Fig. 1

When you remove the shotgun from its box, you will see the 2 major components shown above, the barrel and the shotgun (Fig. 1). Your VR-MC shotgun should come with 3 choke tubes, one installed in the barrel and 2 extra tubes, along with a choke tube wrench and a spare O-ring. You should have an instruction manual, a SAAMI safety booklet and a NSSF pamphlet. A gunlock is also included for your use. (Please read the instructions included with your gunlock for proper use of this added security and safety device).

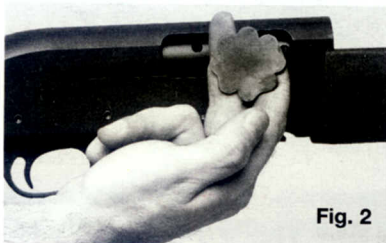


Fig. 2

The bolt handle of your shotgun is protected from damage by a rubber pad. Simply slide your fingers under the rubber pad as shown in Fig. 2 and lift the pad completely off the bolt handle.

MANUAL SAFETY

Your shotgun is equipped with a manual trigger block safety button located in the trigger guard, just behind the trigger. When the button is pushed from the left side of the receiver, protruding to the right side, the trigger is blocked and the safety is on as shown in Fig. 3



Fig. 3

When the button is pushed from the right side of the receiver, protruding to the left side, you will see a red circle on the safety button indicating the safety is off and the shotgun is in an unsafe condition, ready to fire if the trigger is pulled, as shown in Fig. 4.



Fig. 4

WARNING

The manual safety of your shotgun should always be on except for when you are ready to pull the trigger and fire the shotgun. This will help insure that no accidental discharges take place. You should only have the safety off, and be able to see the red line on the left side of the receiver, when you are ready to shoot.

